

OPR PWC JETSKI SEADOO INSTALLATION GUIDE

Every kit is hand prepared in Toronto by On Point Racing, specific for your machine / application. Prepare your machine for night riding, be seen by other watercraft.

Instructions:

1. Run wire from battery, to switch, to LED light connection points (front & rear) (12FT)
 2. Connect ring connectors (x1) to wire (black) and to fuse end (red) (x1)
 3. Install hook mounts / glue with 3M tape & Sikaflex 295 UV or marine adhesive
 4. Drill 3/4" hole for switch in desired location (in center console)
 5. Mount lights in front (Image #1)
 6. Mount lights in rear (Image #2), you will need to drill micro hole for wire (fill will SikaFlex)
 7. Mount lights below rub rail or in hull for underwater (if using auxiliary lights)
 8. Connect wire to rear LED lights with butt connectors (x2)
 9. Connect wire to front LED lights with butt connectors (x2) (port & starboard together)
 10. Connect red wire to from fuse end to switch with butt connectors (x3)
 11. Connect wire to auxiliary light (underwater or rub rail lights) with butt connectors (x2) *
 12. Mount wire in loom, cut to size (12FT)
 13. Finish with zip ties (x10)
- (* if required) (Instructions may vary from each machine)

Required:

1. Sikaflex 295 UV or other suitable marine adhesive (3M)
2. Drill with 3/4" and smaller bits
3. Crimper for butt connectors (16ga)



Image #1:
Mounted port & starboard LED strips
with holeless wiring location (remove cover)




Image #2:
Mounted rear LED strip location
(under seat mount)

OPR ANGEL EYE HALO ILLUMINATED SWITCH DIAGRAM

SWITCH ON, LIGHT ON



LIGHT ALWAYS ON

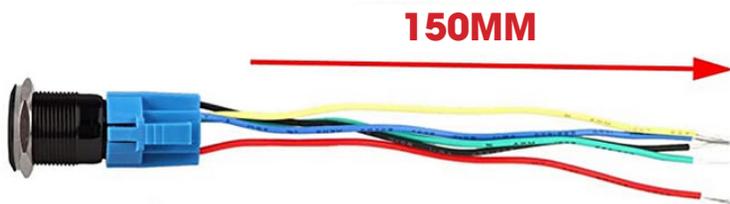

- Red wire: Positive LED "+"
- Black Wire: Negative LED "-"
- Green Wire: Common Pin "C"
- Blue Wire: Normal Open Pin "NO"
- Yellow Wire: Normal Closed Pin "NC"

